


Driver Card

To properly set up your Vector ELD:

- Log in to the application with your account credentials.
- Connect the ELD device to a suitable power outlet in your vehicle.
- Place the device firmly on the dashboard to ensure stable operation.

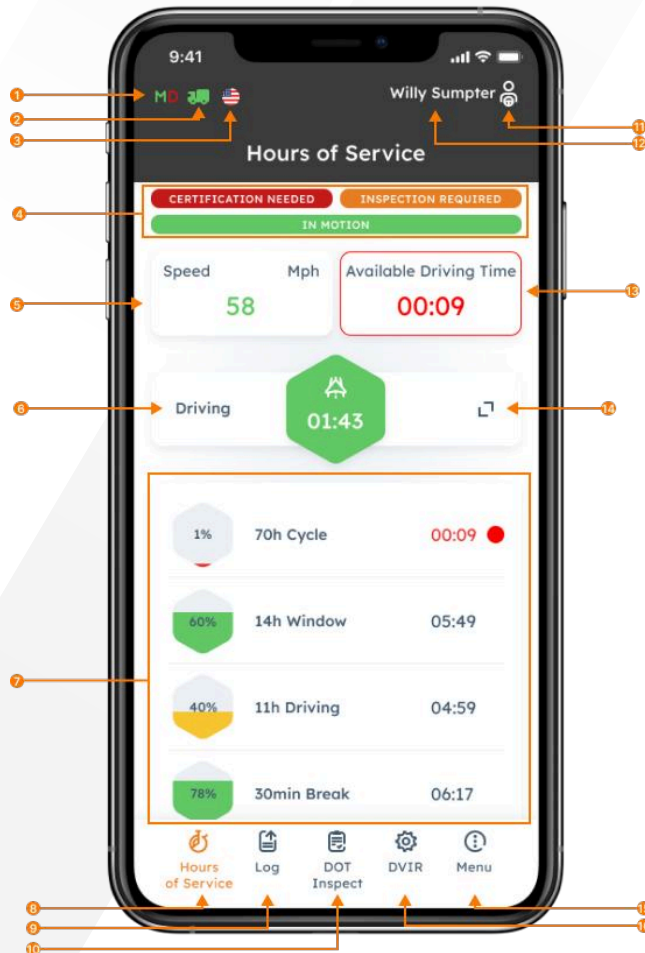

1. Malfunctions and data inconsistencies icon shows if there are any issues with a unit or ELD.

2. Truck icon shows track to PT30 connection.

3. Flag icon shows the rules of which country you are following at the moment.

4. Notifications.

5. Track speed.

6. Current status.

7. HOS counter.

8. HOS menu button.

9. Log menu button.

10. DOT inspection menu button.

11. Co-driver icon allows to switch a driver.

12. Name icon shows the name of the driver whose working hours are counting at the moment.

13. Available driving time.


14. Expand Button.

15. Additional Menu button.

16. DVIR menu button.


DOT Inspection

The DOT Inspection menu provides summaries of all the collected data about the driver, truck, and trip. You may also use this menu to transfer the data to FMCSA during the DOT inspection, certify your logs, or view unidentified records.

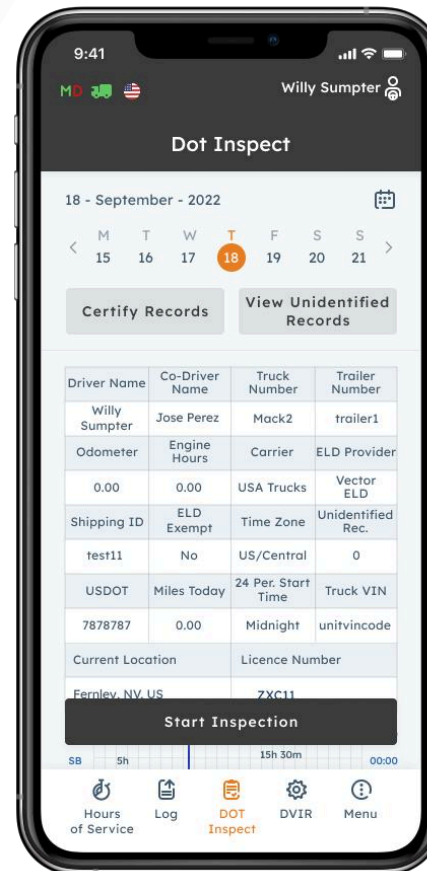

Tap the Start Inspection button and check if your logs are ready to be transferred to the safety officials.

Data Transfer

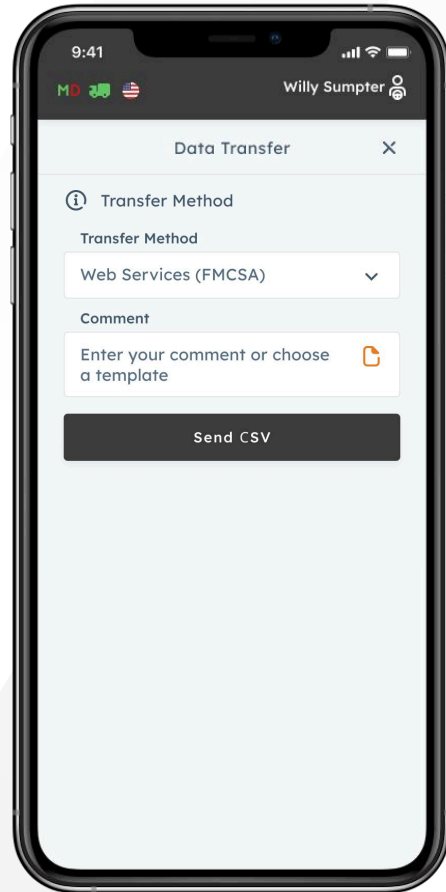

If everything is OK, tap the “Transfer Data to Police” button and choose the method of sending your logs:

- **send it to the Web Services (FMCSA)**
- **send it to the FMCSA email**

You need to add a comment and tap the “Send CSV” button to complete the Data Transfer.

The reporting period will vary depending on the rules of the country in which you operate.

Also you can choose “Send it to the personal email”. You need to enter the recipient’s address, add a comment (optional) and tap the “Send PDF” button.